 


Speed Dyno Setup & Installation

1. Run "setup.exe" from the installation media.
2. If the NemiQuad driver did not automatically install during software installation it will need to be installed manually. Follow these simple steps:

From Windows Device Manager, locate the following icon:



Right click the icon and select "Install/Update Device Driver".

When prompted, choose to "locate the driver manually" and point to the "NEMIQUAD DRIVER" folder on the installation media. the driver should then install.

Configuration

Go into "Settings" (gear icon in upper left

corner).

Set the com port (usually com 3)

Set the "L Counts Rev" to 240

Set the "R Counts Rev" to -240

Note:

The negative count values may be alternated depending on which direction the athlete drives on the unit.