



A DIVISION OF **NEMI**

INVACARE STEEL GUARD MOUNT  
PN 1621



Your new Invacare soccer guard mount kit should contain the following items:

- (1) Hardware Packet
- (1) Main Guard Mount
- (2) Ball Guards



Place the main guard mount on the chair as shown above.



Install the jack screws on each ball guard. The threaded end of the jack screw should be flush with the frame for installation.



Mount the ball guards to the main guard mount as shown.








Install & tighten the  
"U" bolts **SECURELY**.



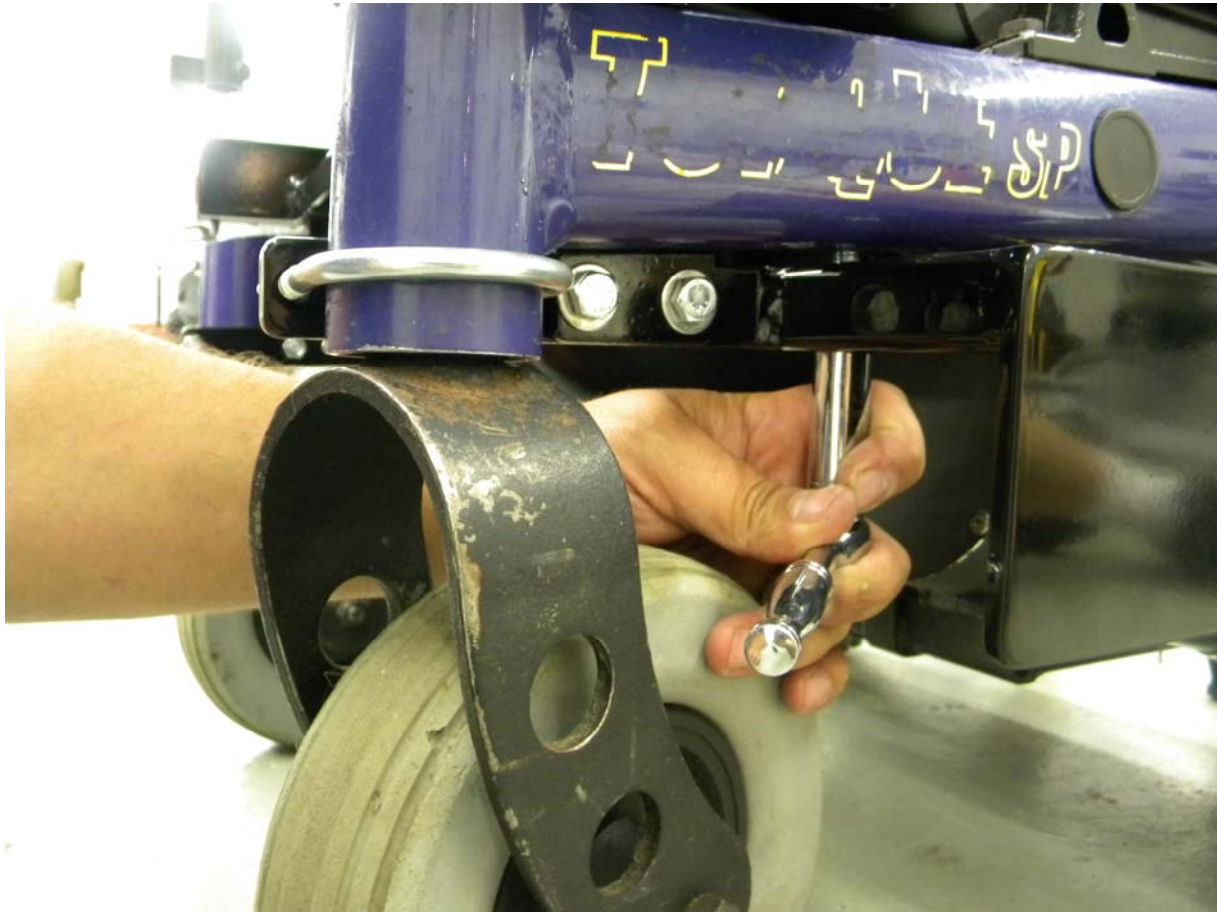

The jack screws can be used to level the guard as well as increase overall rigidity.