

**POWER**  
**SOCCER**  
**SHOP.COM**




A DIVISION OF **NEMI**

**Permobil M300 Guard Mount:**

PN 5149



- The first step is to attach the main guard bracket to the chair. You will need the two attaching plates included in the kit, and the main guard bracket.

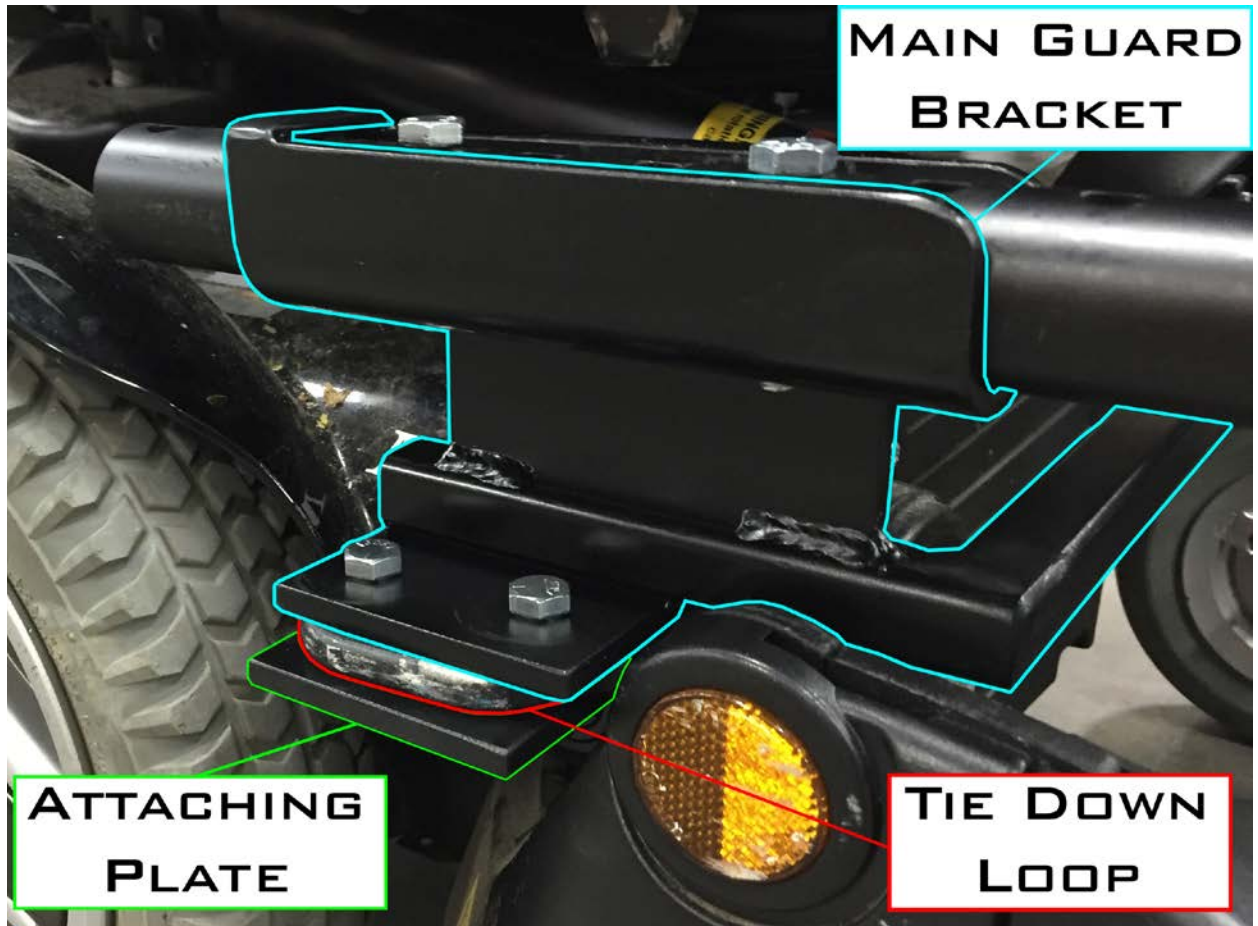

- Place the main guard bracket on top of the tie down loops on each side of the chair, using the supplied hardware and the two steel attaching plates, mount the guard bracket to the chair.

- Next you will need to attach the arms for the guard on each side of the chair using four of the supplied bolts, two on each side.
- Lastly you will need to attach the guard, using four of the supplied bolts/washers/lock nuts to attach each side of the guard to the arms installed in the previous step.

