



REASSEMBLING SPEED FORCE AFTER UNPACKING


REMOVE FROM BOX AND REATTACH WHEELS FOLLOWING PICTURES BELOW.

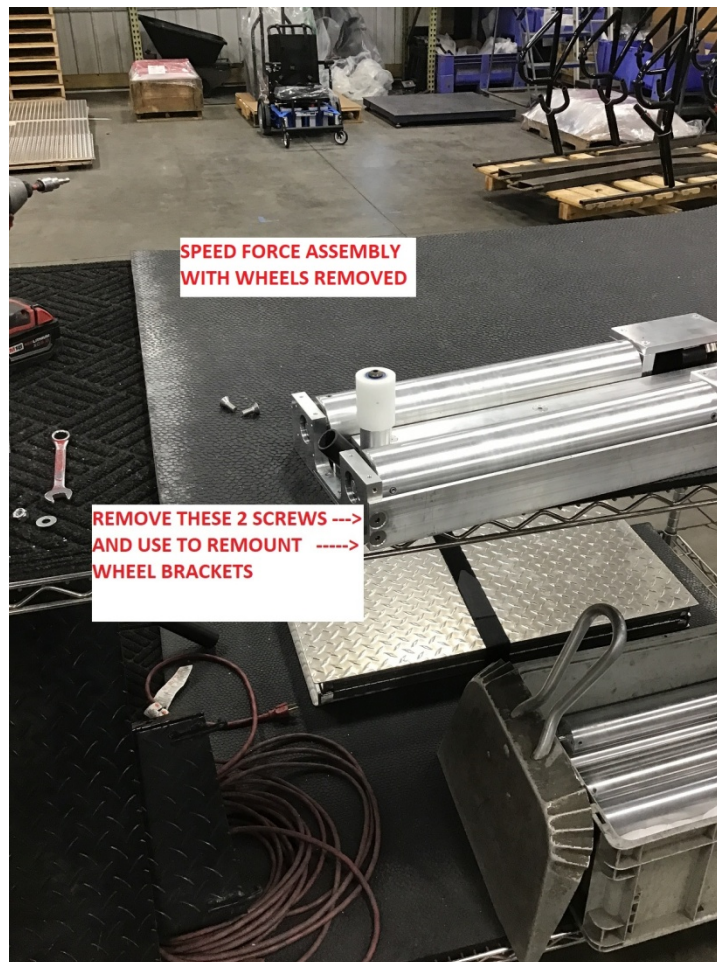



**INSTALL FIRST WHEEL
BRACKET**

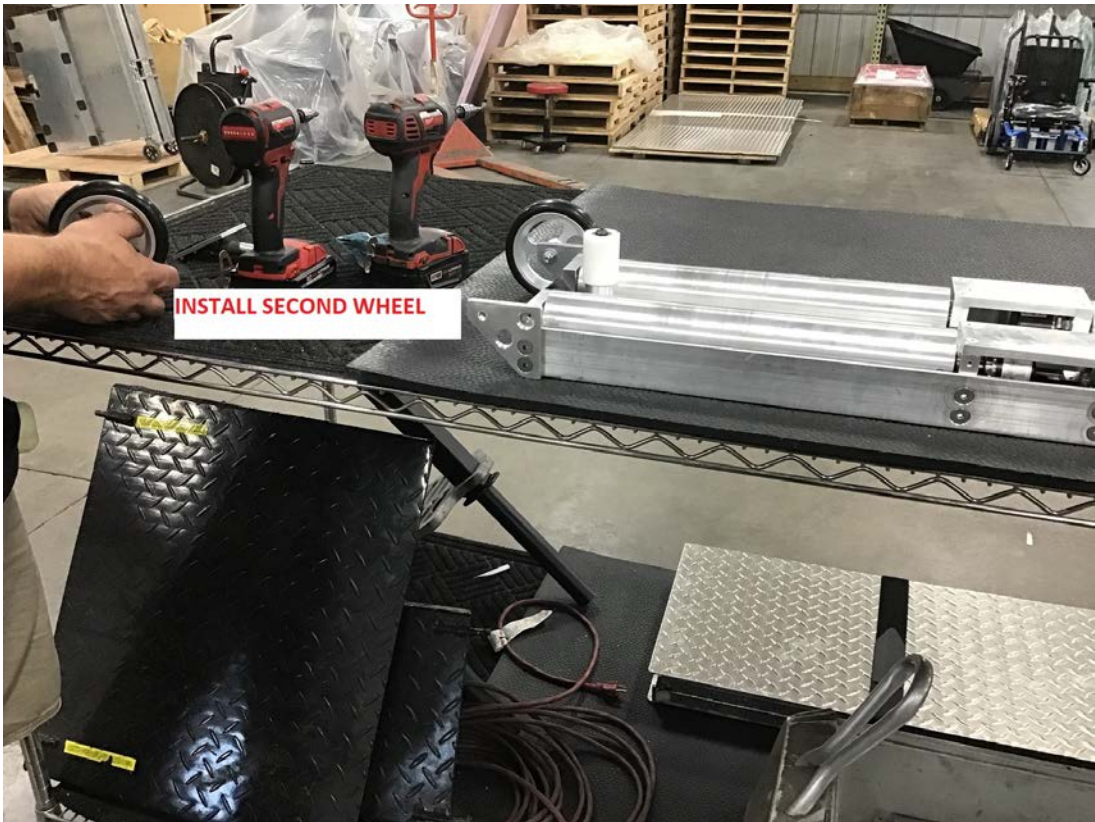

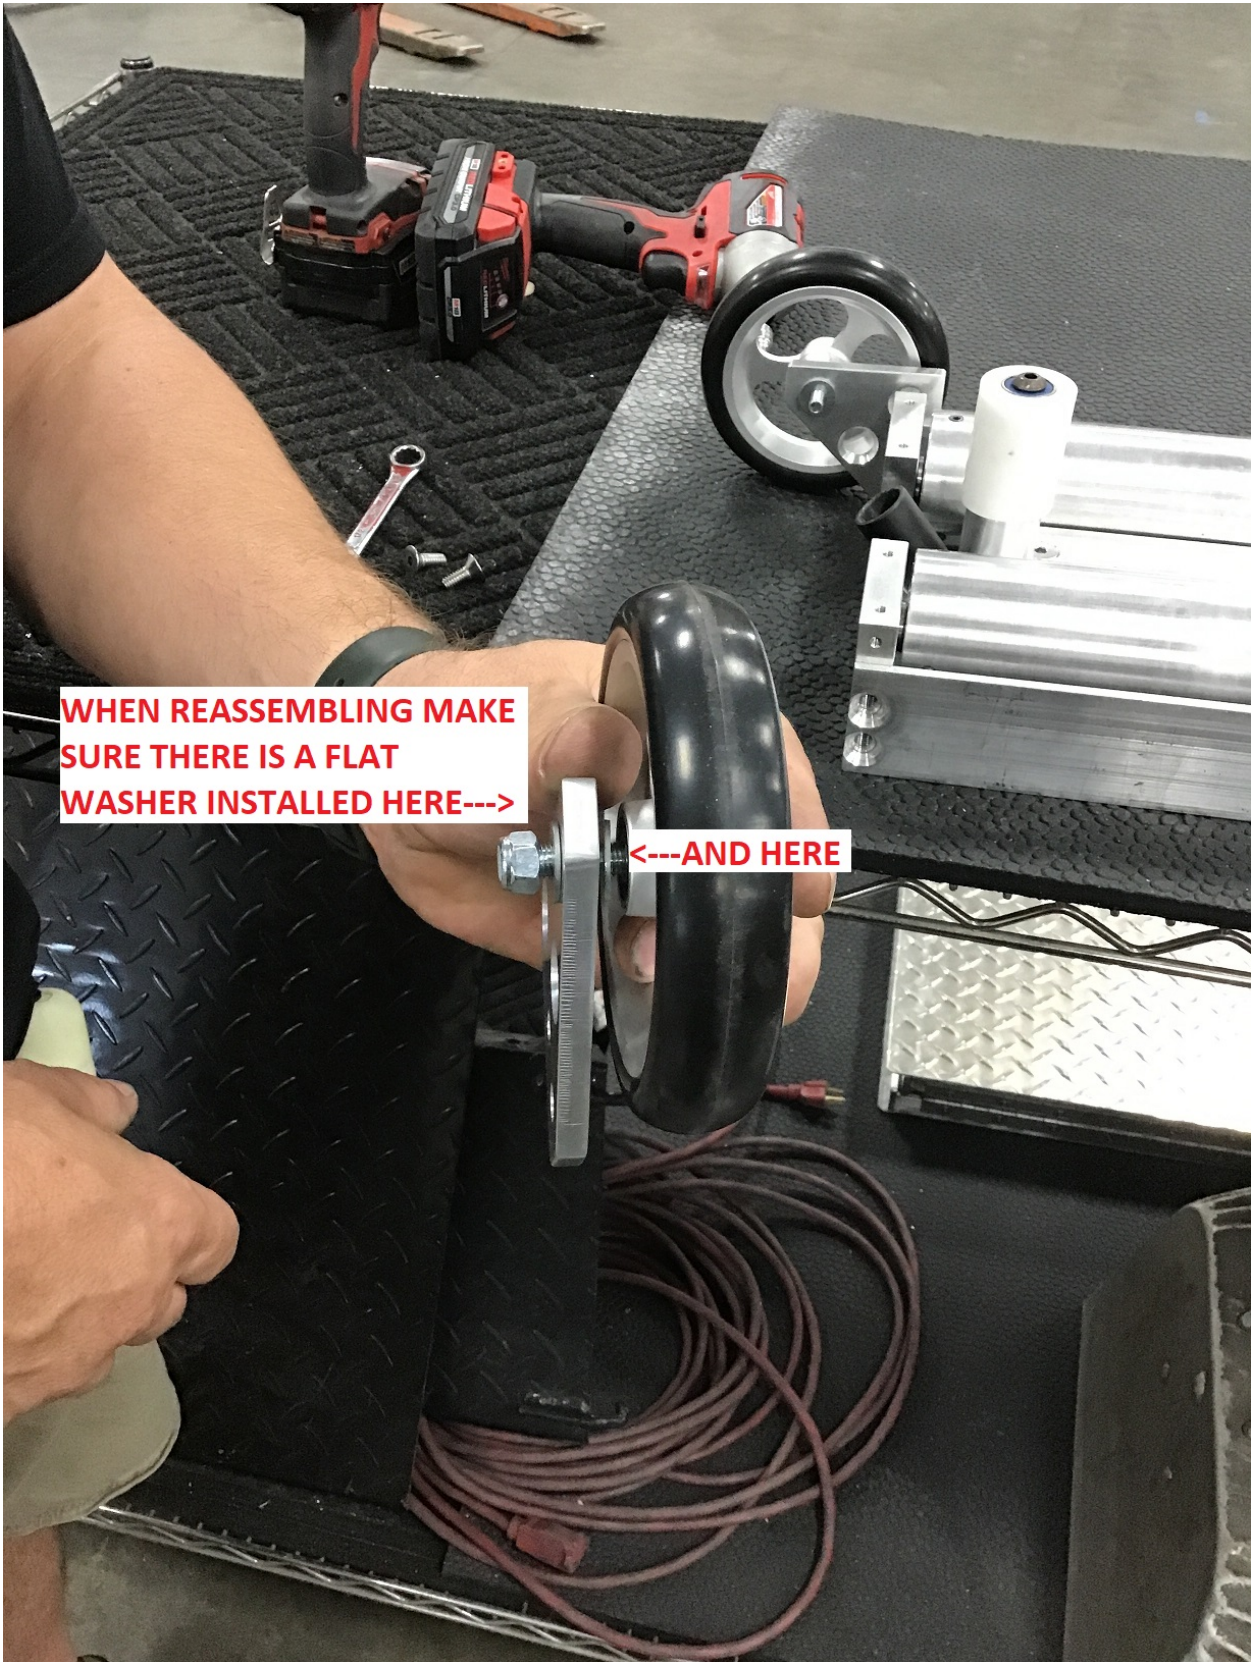

WHEN REASSEMBLING MAKE SURE THERE IS A FLAT WASHER INSTALLED HERE--->

<---AND HERE



**WHEN REASSEMBLING
MAKE SURE THERE IS A
FLAT WASHER INSTALLED
HERE----->**





**COMPLETED SPEED FORCE
ASSEMBLY**